



NEW STYLE DIGITAL AVANTI REMOTE CODING INSTRUCTIONS



Code Learning – Bulk Code- For Garages with only one motor

1. On the back of control box, short press on the **red learn button** and LED light will flash & **bu** will show on the display. * Long press on button 2 on pre coded remote will do the same as above.
2. Press top button on your handset 2 times (1 second between presses).
If you are coding your wall remote you press the top left button 2 times (1 second between presses).

Led light will flash rapidly indicating the successful coding in of the run function.

If you have more than one remote to code in, please repeat the same process for each individual remote.

3. With bulk coded remotes, the second button down on the handset or the RH top button on the wall remote, will automatically be programmed to turn the courtesy light on and off without operating the door.

Code Learning- for Garages with 2 or more openers

The instructions below will allow you to operate 2 Centurion motors from a single remote.

i.e **Motor #1 on top button. Motor #2 on another button.**

1. On the back of the control box of Motor #1, short press **red learn button** and LED light will flash & **bu** will show on the display.
2. Use the **yellow + Button** to scroll through till **ru** (Run) shows on the display screen.
3. Press button on handset you wish to code to operate the Door 2 times (1 second between presses).
LED light will flash rapidly which indicates successful coding in the run button.
4. Repeat above for each individual remote you wish to program to motor #1. Make sure it's the same button position for all remotes.
5. To program Motor #2 repeat the above instructions but choose a different button on the remote to run Motor #2 on each remote.

Code Deleting



1. Press red **LEARN** button on opener once. The LED will display **bu** and the light will slowly flash.
2. Hold green **CONFIRM** button down for 5 seconds until led light on the opener flashes rapidly.
3. Deleting codes complete.



Battery Replacement

1. Remove 2 screws from back of remote casing.
2. Carefully remove both batteries out of holder.
3. Replace 2 x CR2016 3V batteries with numbers on batteries facing upwards.
4. Carefully replace batteries with components facing upwards.
5. Replace casing and screws.

A **Control Box - Overview**

	<p>+ In Standby: Decrease or Increase Force Offset Values Press + and - together: Enter Function Setup Menu In Function Setup Menu: Scroll Functions and Values In Transmitter Setup Menu: Scroll Functions</p>
	<p>LEARN Short Press: Enter Transmitter Setup Menu (See C 3) Long Press: Forced Relearn/Fine Tune (5 sec) (See D L L L L)</p> <p>CONFIRM In Standby: Acts as Run Button (Open and Close Door) In Setup Menus: Confirm chosen function or value</p> <p>Courtesy LED Light: Acts as Run Button (Open and Close Door). Continuous Press overrides Safety Beam in Close Direction.</p>