



## **HOW TO CHANGE SECTIONAL DOOR HAND TRANSMITTER BATTERY: MODEL SDO2**

1. If you have one of these hand transmitters and you find the range is starting to reduce or it just isn't working, it is probably time to change the battery.
2. You will need a couple of things.
3. The new batteries, these are CR2016 3V batteries and a small flat head screwdriver.
4. First, use your screw driver to remove the back cover. Then carefully remove the two batteries.

5. Now, before you put the new ones in check the small contact plate as shown in the video, this can easily get bent when removing the old batteries and it will end up not making contact if it is bent. Gently bend it back up.
6. You are now ready to install the two new batteries, and they should be inserted with the numbers on the batteries facing down.
7. Once that is done reinstall the casing and you are all set and ready to go.