



HOW TO CHANGE THE DIGITAL KEYPAD BATTERY

1. If you find your wireless keypad is starting to lose signal or underperform, it's probably time to change the battery.
2. You'll need a small flat head screwdriver, an allen key, and the two new batteries CR 2032.
3. Firstly, use your screwdriver to remove the front panel.
4. Then use the allen key to remove the keypad from the wall mount.
5. Next, unlock the battery compartment on the back of the keypad unit and carefully remove the batteries.
6. You're now ready to install the two new batteries and they should be inserted with the numbers on the battery facing up, then just refit the cover.

7. Then put the Wall Mount back together with the allen key, and put the front cover back on. And you're all done and ready to go.