



HOW TO CHANGE SECTIONAL DOOR HAND TRANSMITTER BATTERY: MODEL SDO10

1. If you have one of these hand transmitters and you find the range is starting to reduce or it just isn't working, it's probably time to change the battery.
2. You will need a couple of things.
3. A small flat head and philips head screwdriver.
4. And the new battery, a 32A 12V.
5. First, use your screwdriver to peel back the sticker on the back.
6. Then unscrew and remove the back cover.

7. Carefully remove the old battery from the transmitter assembly and replace it with the new one. Now reconnect the assembly with the front and back casing.
8. Replace the screw. Put the sticker back and you're good to go.