



HOW TO CODE SECTIONAL DOOR HAND TRANSMITTER OR WALL STATION : MODEL SDO10

1. Here is how to code the remote or wall station for the SDO10 door opener.
2. Always make sure you have a safe means of working at height because you will need to comfortably reach the control panel on the back of the opener.
3. Briefly press the YELLOW code set button, the RED LED will flash. Now press and release the button on the transmitter you wish to use and the RED LED will stop flashing.
4. Quickly press and release the button on the hand transmitter again.

5. The RED LED will now quickly flash, indicating the code has been accepted.
6. Press the hand transmitter a third time and the door will operate and you are all done.
7. If you have more than one hand transmitter or wall button to code, simply repeat this process.