



## **HOW TO DELETE ROLLER DOOR OPENER CODES: MODEL RDO10B**

- 1. If you lose a handset or it get's stolen, it is important to delete the code from your door opener to ensure your home's ongoing security.**
- 2. Here is how to delete the codes on the RDO10B handset.**
- 3. Always make sure you have a safe means of working at height because you will need to comfortably reach the control panel on the back of the opener.**
- 4. Briefly press the RED learn button, the opener light will flash and bu will appear on the control panel.**
- 5. Press and hold the GREEN confirm button for 5 seconds and the opener light will flash rapidly.**

6. All handsets are now deleted, but you need to code in any new handsets or the other handsets you still have. It is a simple process.
7. Briefly press the RED learn button, the opener light will flash and bu will appear on the control panel.
8. Press and hold the top button on your hand transmitter. The opener light will flash rapidly and you're all done.
9. If you have more than one hand transmitter or to code the wall station, simply repeat this process.