



HOW TO DELETE SECTIONAL DOOR OPENER CODES: MODEL SDO4

- 1. If you lose a handset or get stolen, it's important to delete the code from your door opener to ensure your home's ongoing security.**
- 2. Here's how to delete the codes on the SDO4 handset.**
- 3. Always make sure you have got a safe means of working at height because you will need to comfortably reach the control panel on the back of the opener.**
- 4. Briefly press the RED learn button, the opener light will flash and bu will appear on the control panel.**
- 5. Press and hold the GREEN confirm button for 5 seconds and the opener light will flash rapidly.**

6. All handsets are now deleted, but you need to code in any new handsets or the handsets you still have, it's a simple process.
7. Briefly press the RED learn button the opener light will flash and bu will appear on the control panel.
8. Press and hold the top button on your hand transmitter. The open, the light will flash rapidly and you're all done.
9. If you've got more than one hand transmitter or to code the wall station, simply repeat this process.