



HOW TO DELETE SECTIONAL DOOR OPENER CODES: MODEL SDO10

- 1. If you lose or have a hand transmitter stolen, it's important to delete the codes from your door opener to ensure your home's ongoing security.**
- 2. Here's how to delete the codes for the SDO10.**
- 3. Always make sure you have a safe means of working at height because you will need to comfortably reach the control panel on the back of the open up.**
- 4. First, turn the power off at the powerpoint while the YELLOW button is pressed down. Turn the power switch back on, wait for the LED light to flash, then release the button.**

5. All handsets are now deleted, but you need to code in any new handsets or the other hand transmitters you have.
6. Briefly press the YELLOW code set button.
7. The RED LED will flash.
8. Now press and release the button on the transmitter you wish to use and the RED LED will stop flashing.
9. Quickly, press and release the button on the hand transmitter again. The RED LED will now quickly flash, indicating the code has been accepted. Press the hand transmitter a third time and the door will operate.
10. And you're all done. Unless, of course, you've got other hand transmitters or a WALL button to code then just repeat these steps for each unit.