



HOW TO REALIGN THE PE BEAMS

- 1. If your door opener is fitted with optional PE Beams and the door won't close, chances are the beams have been knocked by something and need realignment**
- 2. To save yourself the cost of a service visit.**
- 3. This is generally a simple and quick fix. So, here's how to do it.**
- 4. The beams need to be visually aligned to start with. Once they look about right, further adjust the receiver until the LED lamp stops blinking.**
- 5. A constant RED and GREEN light indicate correct alignment.**
- 6. If this hasn't fixed the issue, you might need to contact your nearest garage door expert for some onsite assistance and service.**